



Version 1 (except model 116.036 and 123)

- 1 Switch
 - SP = Resume
 - V = Decel
 - A = Off
 - B = Accel
- 2 Control unir
- 3 Sensor
- 4 Actuator
- 5 Stop lamp switch
- 6 Stop lamp
- a Terminal 15

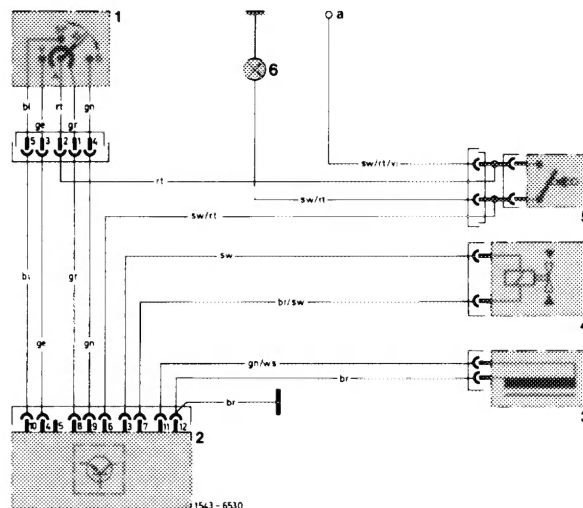

Version 1 (model 116.036 up to chassis end No. 000 689)

- 1 Switch
 - SP = Resume
 - V = Decel
 - A = Off
 - B = Accel
- 2 Control unir
- 3 Sensor
- 4 Actuator
- 5 Stop lamp switch
- 6 Stop lamp
- a Terminal 15
- b Fuse 4 in main fuse box

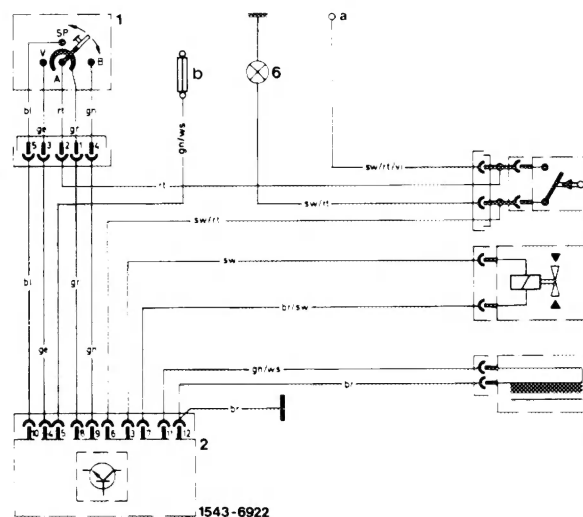

Version 2 all models (model 123 with automatic transmission from start of production)

- 1 Switch
 - SP = Resume
 - V = Decel
 - A = Off
 - B = Accel
- 2 Control unir
- 3 Sensor
- 4 Actuator
- 5 Stop lamp switch
- 6 Stop lamp
- a Terminal 15

